2006-07 ACCESSORIES AND EQUIPMENT

Bumpers - Civic (All Except Hybrid)

FRONT BUMPER REMOVAL/INSTALLATION

NOTE:

- **Have an assistant help you when removing and installing the front bumper.**
- **Take care not to scratch the front bumper and body.**
- **Put on gloves to protect your hands.**

1. Remove these items:
   - Front fender trim (see **FRONT FENDER TRIM REPLACEMENT**)
   - Front grille cover (see **FRONT GRILLE COVER REPLACEMENT**)
2. Remove the bolts (A, B), screws (C), and clips (D, E) securing the front bumper (F).

NOTE: To remove the clips D and E, pry the inner clip up at the edge near the line (G) on its head.

2-door

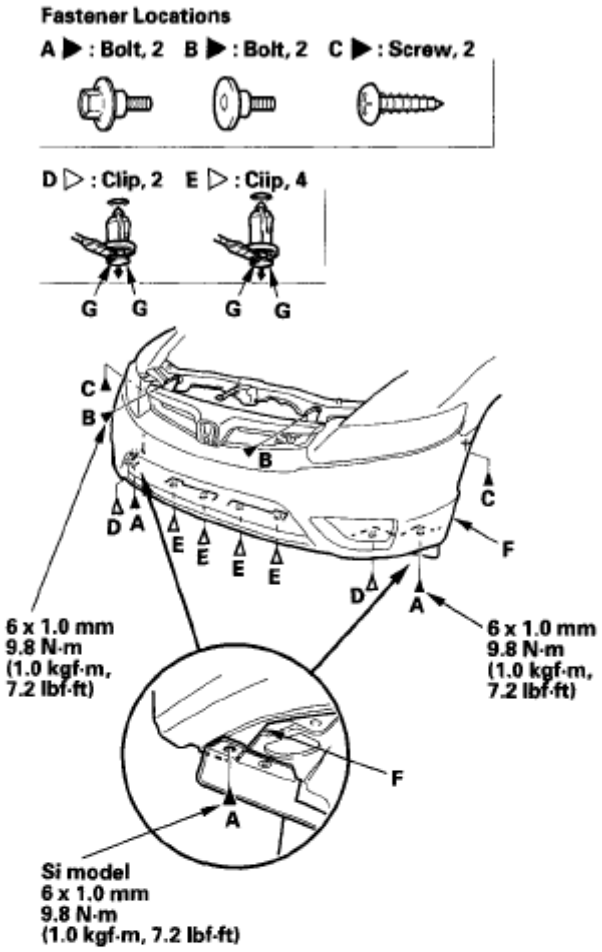
Fastener Locations
A ▶ : Bolt, 2 B ▶ : Bolt, 2 C ▶ : Screw, 2
D ▷ : Clip, 2 E ▷ : Clip, 4
G G G G
C
B
B
C
D A E E E E
F
D
A
6 x 1.0 mm
9.8 N·m
(1.0 kgf·m,
7.2 lbf·ft)
6 x 1.0 mm
9.8 N·m
(1.0 kgf·m,
7.2 lbf·ft)
F
A
Si model
6 x 1.0 mm
9.8 N·m
(1.0 kgf·m, 7.2 lbf·ft)

4-door

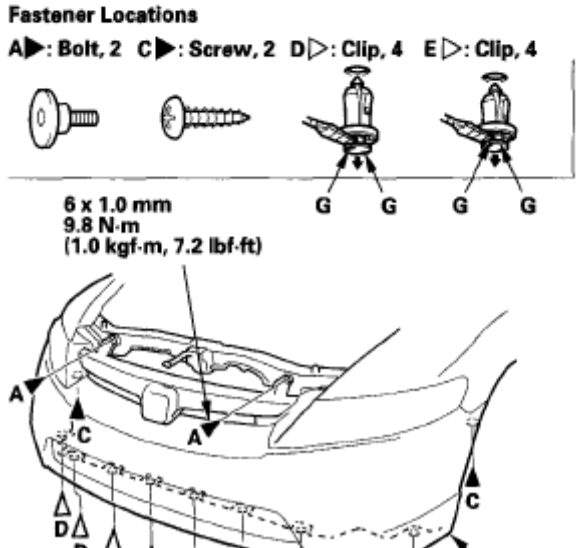
Fastener Locations
A▶: Bolt, 2 C▶: Screw, 2 D▷: Clip, 4 E▷: Clip, 4
G G G G
6 x 1.0 mm
9.8 N·m
(1.0 kgf·m, 7.2 lbf·ft)
A
C
A
D
C

Fig. 1: Identifying Bolts, Screws And Clips (With Torque Specifications)

3. Pull on the front bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

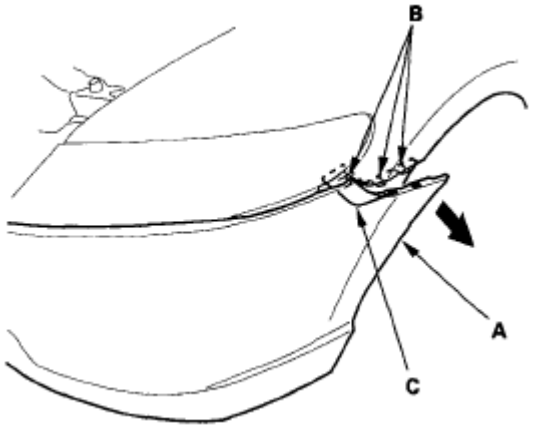

Fig. 2: Identifying Front Bumper Wheel Arch Areas

4. With the help of an assistant, while pulling the wheel arch portion away from the side spacer (A) and the lower corner portion (B) away from between the front inner fender (C) and the front strake (D) (Si model 2-door), pull the front bumper to release the bumper from the hooks (E) on the upper beam (F).

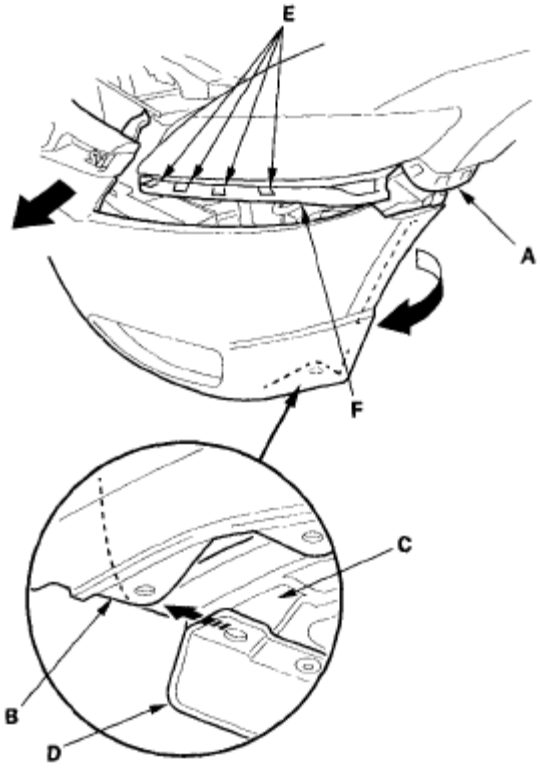

Fig. 3: Identifying Portion Away From Side Spacer

5. Remove the front bumper (A).

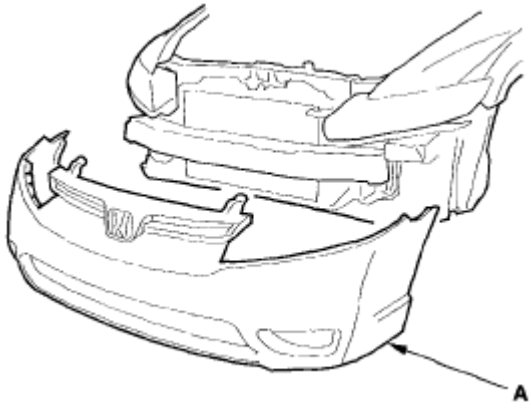

Fig. 4: Identifying Front Bumper

6. Release the hooks (A) (4-door), then remove the front bumper absorber (B) from the front bumper beam (C).

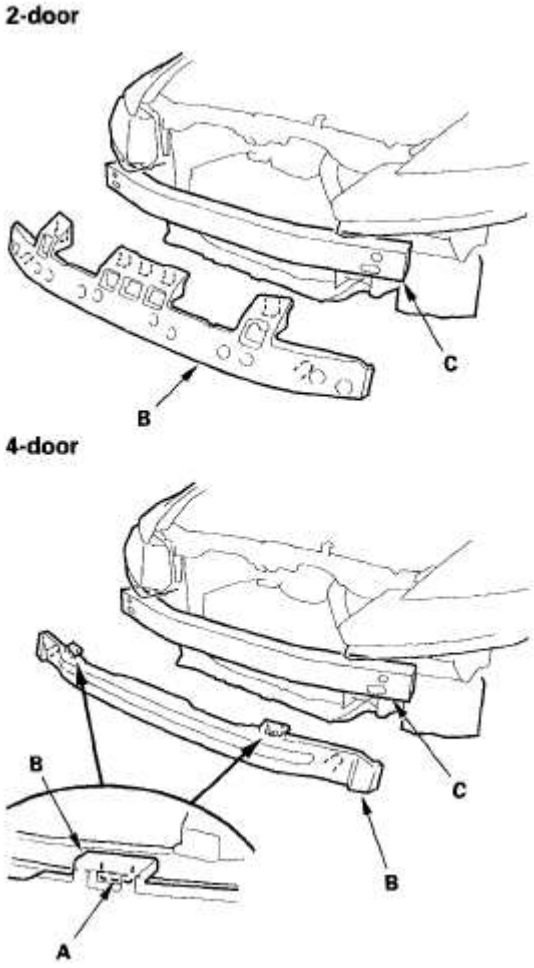

Fig. 5: Identifying Front Bumper Absorber From Front Bumper Beam

7. Install the bumper in the reverse order of removal, and note these items:
   - Make sure the front bumper engages the hooks (of both center upper beams and side spacers) on each side securely.
   - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
   - Push the clips and hooks into place securely.

FRONT AIR SPOILER REPLACEMENT

NOTE:
- **Take care not to scratch the front bumper.**
- **Put on gloves to protect your hands.**

1. Remove the bolts (A) and clips (B, C) securing the air spoiler (D).

NOTE: To remove the clips, pry the inner clip up at the edge near the line (E) on its head.

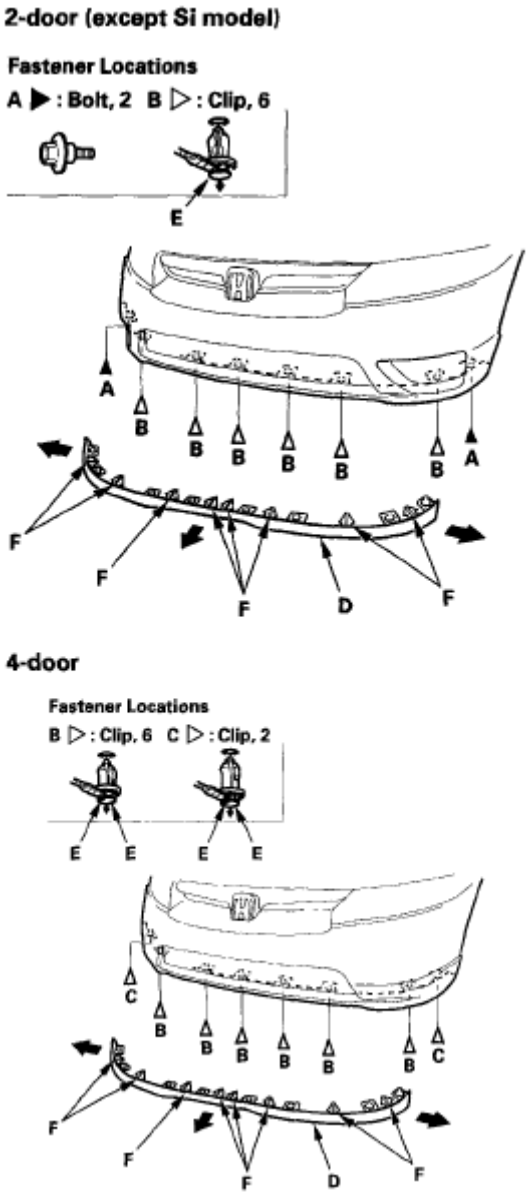

Fig. 6: Identifying Bolts, Clips And Air Spoiler

2. Pull the front air spoiler back to detach the hooks (F) and remove the spoiler.
3. Si model 2-door: Remove the clips securing the air spoiler (A).

NOTE: To remove the clip, pry the inner pin up at the edge near the line (B) on its head.

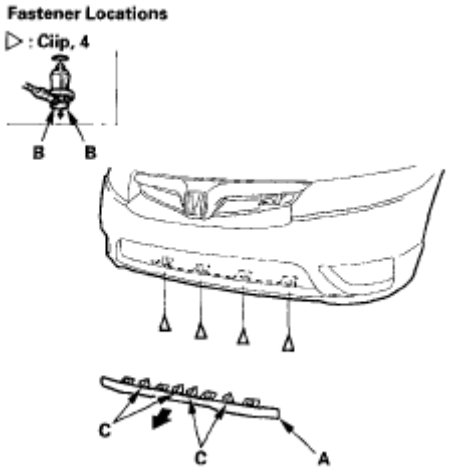

Fig. 7: Identifying Air Spoiler

4. Pull the front air spoiler back to detach the hooks (C) and remove the spoiler.
5. Install the spoiler in the reverse order of removal:
   - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
   - Push the clips into place securely.

REAR BUMPER REMOVAL/INSTALLATION

NOTE:

- **Have an assistant help you when removing and installing the rear bumper.**
- **Take care not to scratch the rear bumper and body.**
- **Put on gloves to protect your hands.**

1. Remove the clips (A), screws (B, C), and bolts (D) securing the rear bumper (E).

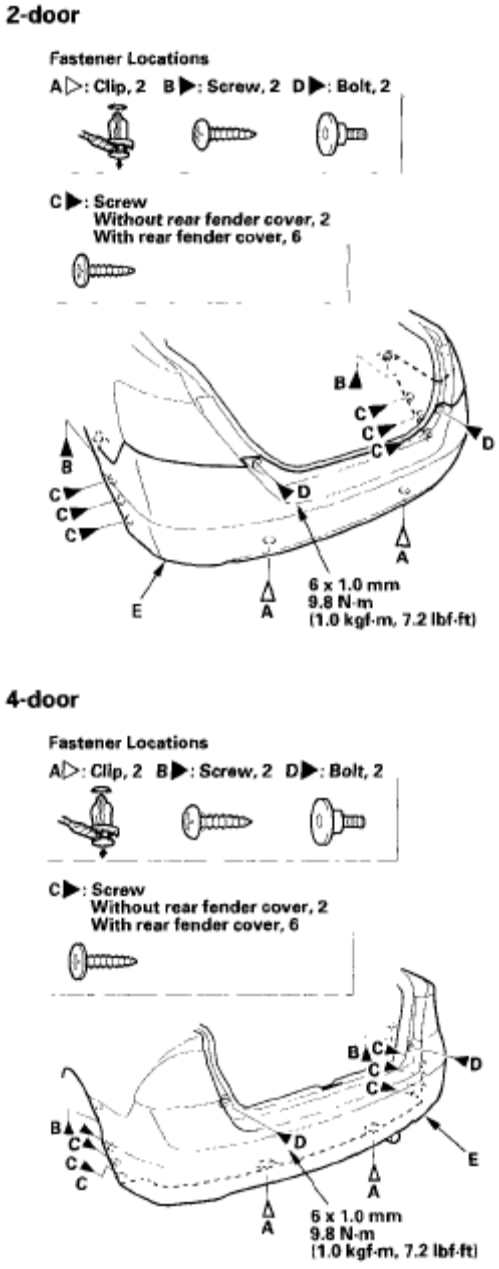

Fig. 8: Identifying Clips, Screws And Bolts

2. Pull on the rear bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

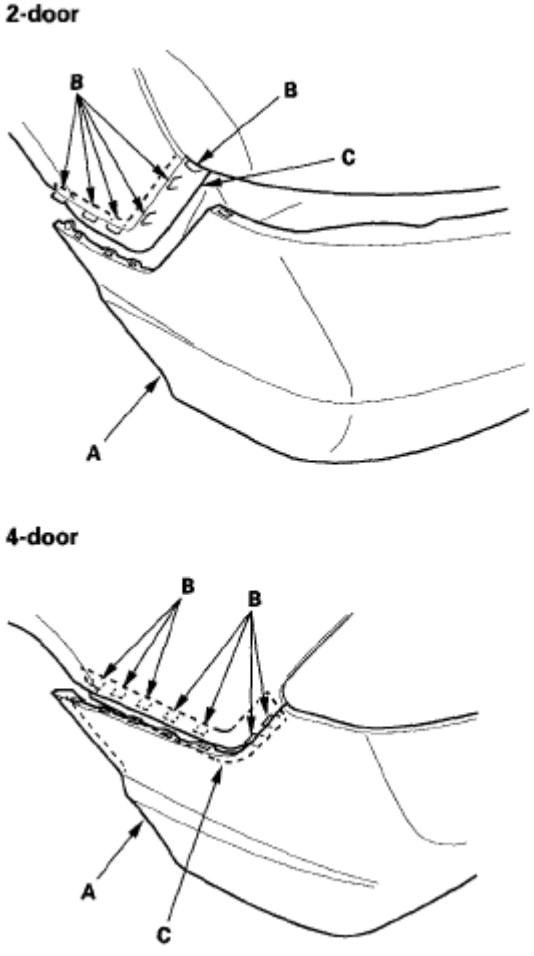

Fig. 9: Identifying Rear Bumper Wheel Arch Areas

3. With the help of assistant, while pulling the wheel arch portion away from the side spacer (A), pull the rear bumper to release the bumper from the hooks (B) on the side bracket (C).

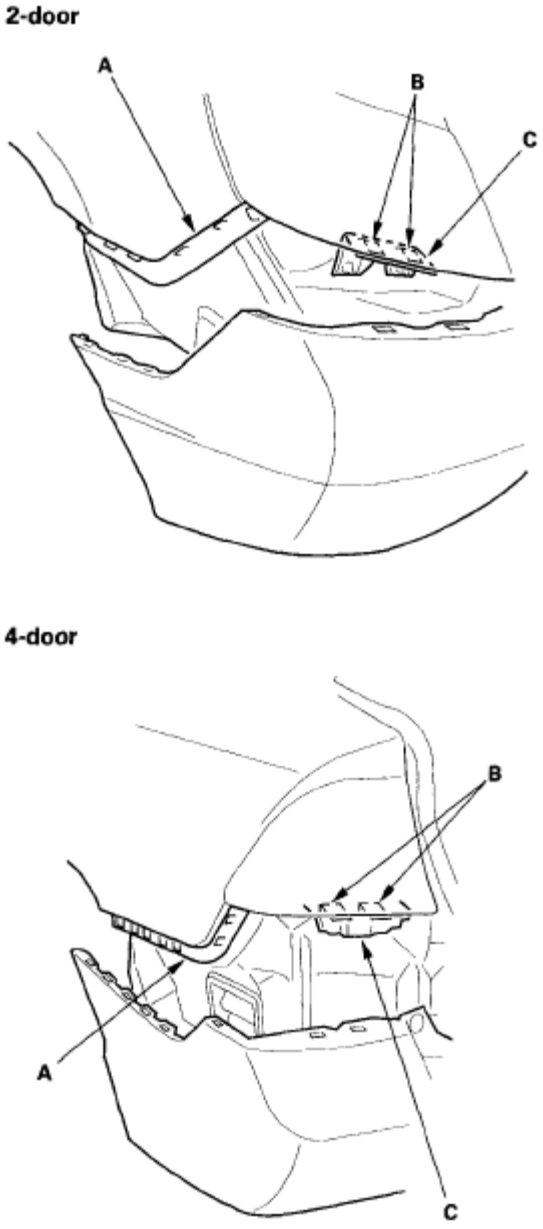

Fig. 10: Identifying Wheel Arch Portion Away From Side Spacer

4. With the help of an assistant, pull the rear bumper to release the bumper (A) from the hooks (B) on the upper bracket (C).

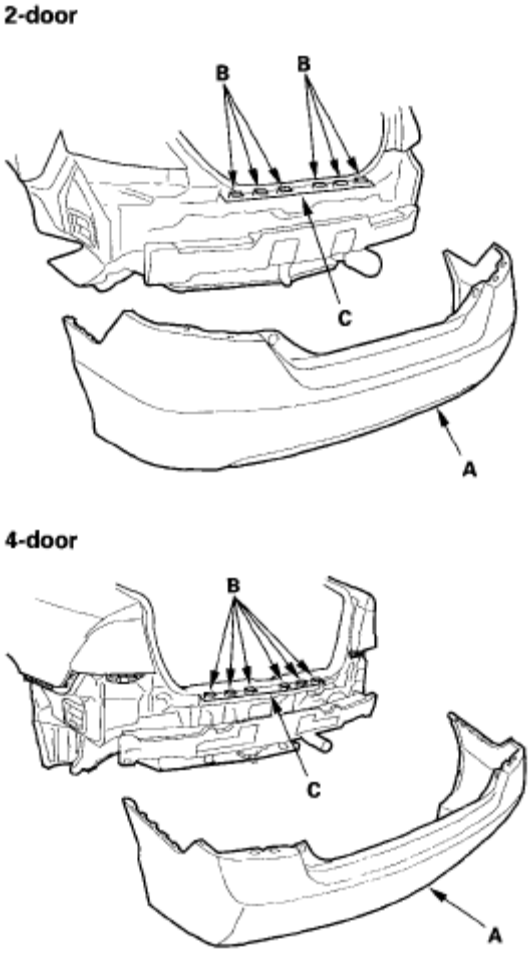

Fig. 11: Identifying Rear Bumper To Release Bumper From Hooks

5. Remove the hooks (A) (4-door), then remove the rear bumper absorber (B) from the rear bumper beam (C).

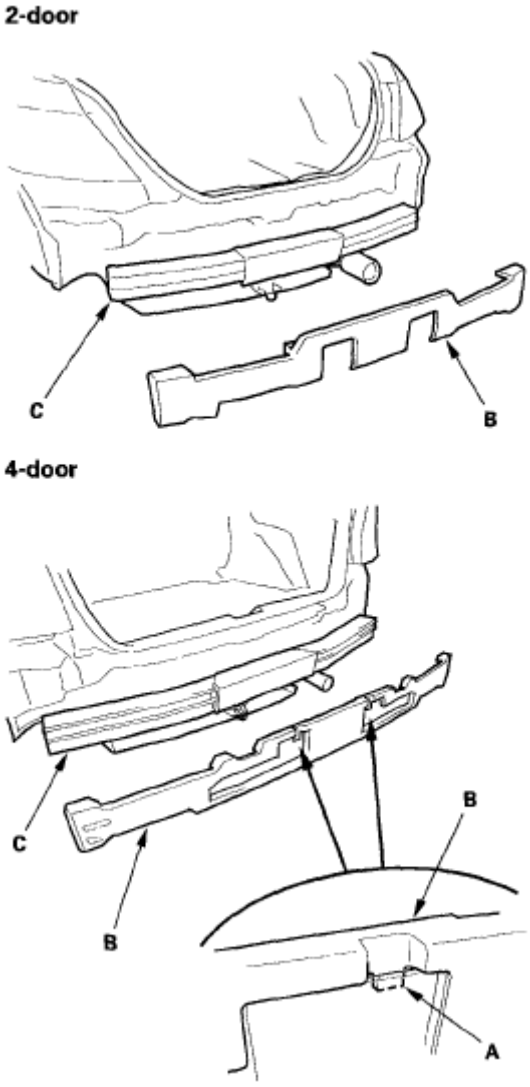

Fig. 12: Identifying Rear Bumper Absorber From Rear Bumper Beam

6. Install the bumper in the reverse order of removal, and note these items:
   - Make sure the rear bumper engages the hooks (of both the side bracket and side spacers) on each side securely.
   - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
   - Push the clips and hooks into place securely.